

How do I setup WRT54GL? Where do I insert the Mobile Data Card? How do I connect to the router and to the mobile network?

Please make sure your Mobile Data Card is activated first by following the documentation in the Mobile Data Card package from your mobile broadband provider. Then, run the CD included in the Linksys WRT54GL package for instructions on how to insert the Mobile Data Card and configure the router.


The setup wizard on the CD will not automatically run when inserted in the CD-ROM drive.

Click on your Windows task bar's Start button and select Run. Enter D:\SetupWizard.exe (if 'D' is the letter of your CD-ROM drive) in the field.

How do I make a connection to the mobile network?

There are three options:

1. Insert the Mobile Data Card and power on the router. Then press the Connect button on the front of the router. After the router successfully connects to the mobile network, the blue Data Card LED on the router will be lit.
2. Log on to the router via the web interface and go to Basic Setup under the Setup tab. Click the Connect button next to Mobile Connection. After the router successfully connects to the mobile network, the Mobile Connection status will change from Disconnected to Connected, and the blue Data Card LED on the router will be lit.
3. Log on to the router via the web interface and go to Mobile Network under the Setup tab. Select the Auto button next to Auto Connect and click on Save Settings. The router will connect to the mobile network after the web page reloads. Subsequently, the router will automatically connect to the mobile network on power up. A connection will be automatically disconnected if it is idle for over 60 minutes (or the value entered by the user via the web interface). The router will re-connect on demand when there is traffic to the internet.

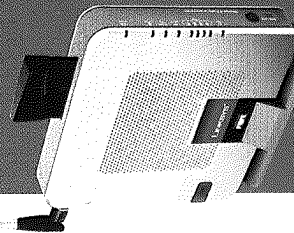

> Frequently Asked Questions

What do the indicator lights and button mean on the router?

Please refer to the User Guide for details:

- Data Card Button** This button allows the user to connect to and disconnect from the mobile network.
- POWER** This light is solid green when the power is on for the router
- ETHERNET** Each of these lights is solid green when there is an active connection to the Ethernet ports connected. They are flashing green when there is network traffic on those ports.
- WIRELESS** This light is solid green when there is a connection to the router through the 802.11b/g wireless connection. This light is flashing green when there is network traffic over the wireless connection.
- DMZ** (De-Militarized Zone) This light is solid green when the DMZ function is active. DMZ allows one local user to be exposed to the internet.
- DATA CARD** This light is solid blue when the Mobile Data Card is connected to the mobile network.
- INTERNET** This light is solid green when the router is connected to the Internet. It is flashing green when there is network traffic over this connection.


Can a mobile broadband data card be inserted or removed when the router is powered?

Inserting or removing a data card while the power is on should be avoided to reduce the possibility of damages to the card and/or the router. In addition, a hot inserted data card will not be detected by the router, and the router may not operate correctly. Therefore, it is recommended to always power the router off before inserting or removing a card.

Who should I call if there is a question or problem?

Please refer to the User Guide on the CD included in the WRT54G3G package for technical support contact information.

0240-00013

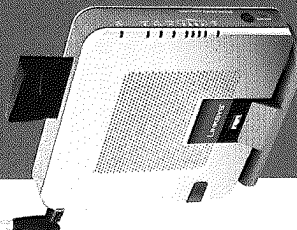

6001-11214182R