


Ku-Feed and Assembly

1. Assemble the Feed and the OMT together as shown. (Lightly lubricate O-ring with silicone grease.)

NOTE:

- * The correct flange is critical.
- * The angle scale of the Feed must be positioned up as shown with respect to the OMT.
- * Be sure the O-ring is properly in the O-ring groove of the Feed.
- * The direction of the bolt should be as shown.

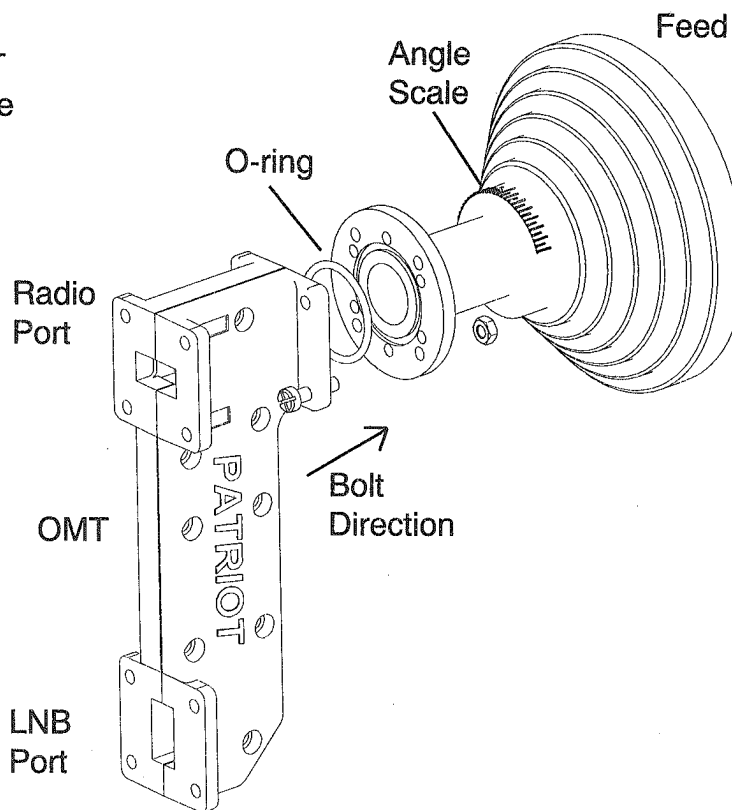


REV 111705 0 02

Ku-Feed and Assembly

1. Assemble the Feed and the OMT together as shown. (Lightly lubricate O-ring with silicone grease.)

NOTE:

- * The correct flange is critical.
- * The angle scale of the Feed must be positioned up as shown with respect to the OMT.
- * Be sure the O-ring is properly in the O-ring groove of the Feed.
- * The direction of the bolt should be as shown.

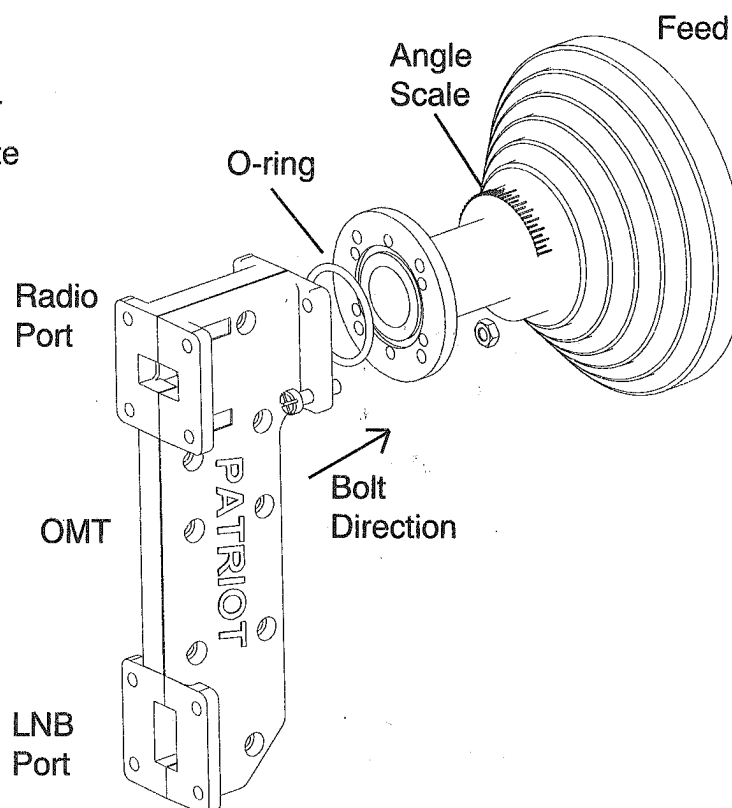

REV 111705 0 02